




BE1230

Visit pager receiver

Buttons and controls

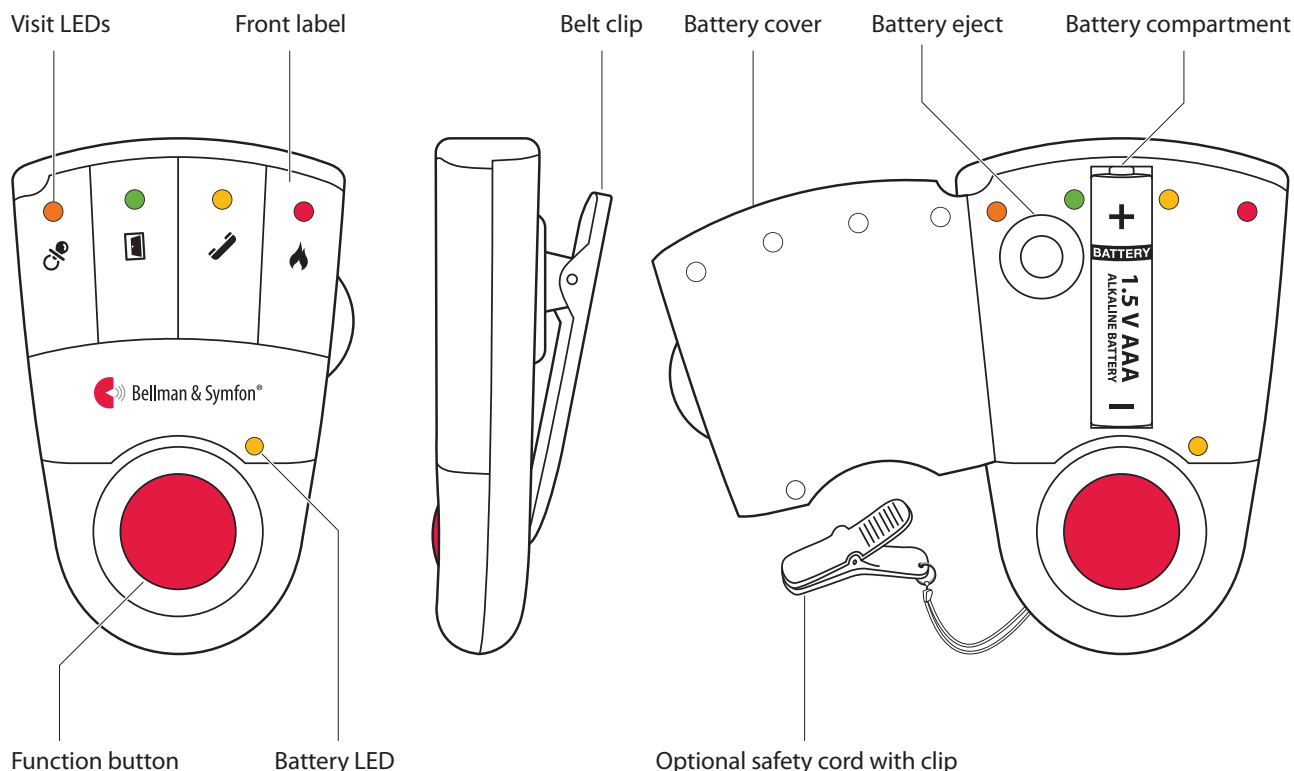

Technical specifications

In the box

- BE1230 Visit pager receiver
- Safety cord with clip
- Extra front label

Dimensions and weight

- Height: 86 mm, 3.4"
- Width: 57 mm, 2.2"
- Depth: 29 mm, 1.1"
- Weight: 70 g, 2.5 oz. incl. battery

Environment

- Operating temperature 15° to 35° C, 59° to 95° F
- Relative humidity 5% to 95%

Power and battery

- Mains power 7.5 V DC 200 mA via the charger
- Battery power 1.2 V AAA NiMH rechargeable battery
- Operation time NiMH battery: 96 hours
- Power consumption Active: ≤200 mA, Idle position: ≤1 mA

Visit LEDs

The Visit LEDs normally indicates the following:

- Orange LED, pacifier symbol The baby monitor is activated
- Green LED, door symbol The door transmitter is activated
- Yellow LED, telephone symbol The phone transmitter is activated
- Red LED, fire symbol The smoke alarm is activated

Frequency and coverage

- Radio frequency 314.91 MHz, 433.92 MHz or 868.30 MHz, depending on the region
- Coverage 50 – 250 m, 55 - 273 yd. depending on the radio frequency and the characteristics of the building


Accessories

- BE1260 Pager charger
- BE1270 Bed shaker

Visit pager receiver

Getting started

- 1 Open the battery cover, fit the battery and close the cover again.
Attach the pager to your belt using the belt clip. For extra security, use the supplied safety cord.
- 2 To test the radio link you need a Visit transmitter. Press the test button/s on the transmitter.
- 3 The pager starts to vibrate and lights up a Visit LED. If the pager is in the BE1260 charging stand with a bedshaker connected, the bedshaker will vibrate. If nothing happens, see **Troubleshooting**.

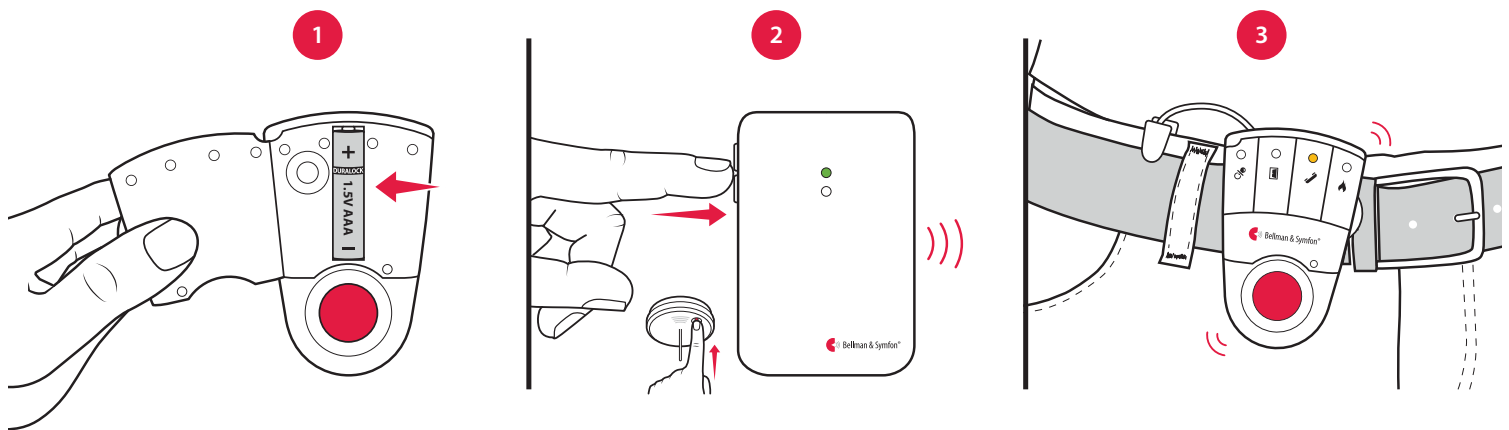

Default signal pattern

When a transmitter is activated, the pager lights up an LED and starts to vibrate with a certain pattern. The transmitters determine the pattern, and the default is as follows:

Activated transmitter	Pager LED	Pager / bed shaker vibration
■ Door transmitter	Green	Slow ■ □ □ □
■ Push button transmitter	Green	Slow ■ □ □ □
■ Telephone transmitter	Yellow	Medium ■ □ ■ □
■ Baby monitor	Orange	Fast ■ ■ ■ ■ ■ ■
■ Smoke alarm	Red	Long ■ ■ ■ ■

Changing the signal pattern

The signal pattern can only be changed on the transmitters. See **Changing the signal pattern** for the relevant transmitter.

Changing the front label

If you want to use Visit for other purposes, the pager front label can be replaced with a customized one. Here is how it's done:

- Open the battery cover, replace the original label with the supplied extra label and close the cover again.

Replacing the battery

If using alkaline batteries, when the battery LED starts to blink in orange, the battery is nearly depleted. Open the battery cover and replace the battery with a new alkaline AAA battery.

If using the BE1260 Pager Charger accessory, when the battery LED starts to blink in orange, place the pager onto the charging stand to recharge. The NiMH battery should be replaced with a new rechargeable NiMH battery every 18 months.

Visit pager receiver


Changing the radio key

If your Visit system is activated for no reason, there is probably a nearby system that triggers yours. In order to avoid radio interference you need to change the radio key on all units. The radio key switches are located on the **transmitters**.

Here is how you change the radio key:

- 1 Open the transmitter cover and move any radio key switch to the up (on position) to change the radio key. See **Changing the radio key** for the relevant transmitter.
- 2 Press and hold the function button on the pager until the green and yellow Visit LEDs blink alternately. Release the button.
- 3 Press the test button/s on the transmitter within 30 seconds to send the new radio key.
- 4 All Visit LEDs on the pager blink 5 times to show that the radio key has been changed. It then returns to normal mode.

Note: All Visit units must be set to the same radio key in order to operate as a group.

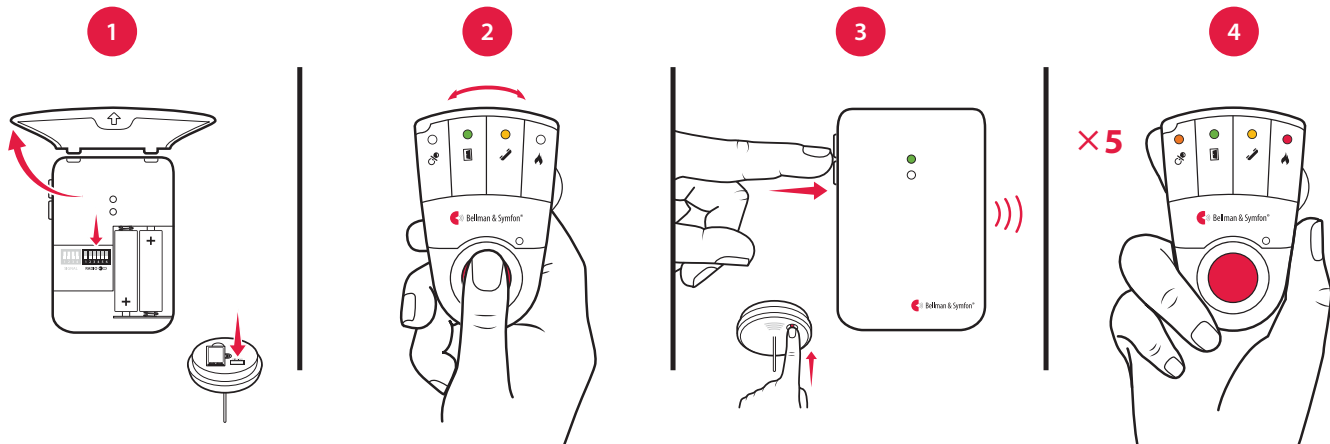

Pager accessories

The pager can be complemented with the following accessories:


■ BE1260 Pager charger

Charges your pager during the night. Place it on the bedside table and connect up to two bed shakers.

Note: The pager will not vibrate when it's charging, but the Visit LEDs will act as usual.

■ BE1270 Bed shaker

Wakes you with vibrations if anything happens while you are asleep. Connect it to the pager charger and slide it under your pillow or mattress.

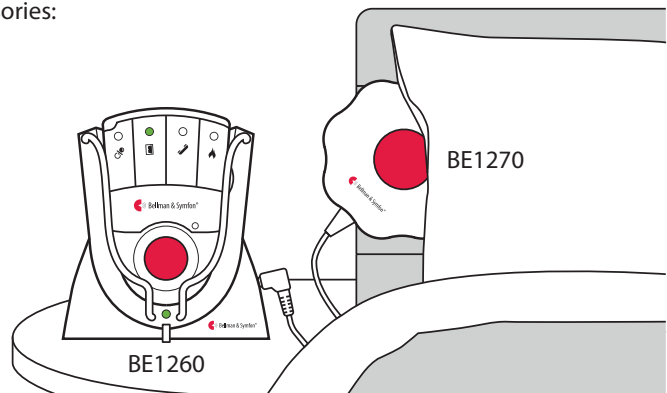



Warning! When using the pager charger **ONLY USE RECHARGEABLE NiMH BATTERIES** in the pager. Non-rechargeable batteries will start to leak if the pager is placed in the charger and the battery acid will damage the electronics. The resulting damage is not covered by warranty.

Visit pager receiver

Troubleshooting

Most problems with the pager can be solved quickly by following the advice below.

If	Try this
The pager seems to be turned off	<ul style="list-style-type: none">▪ The battery is depleted. Replace it with a 1.5V AAA alkaline battery.  Important! If you have a pager charger; only use a rechargeable 1.2 V AAA NiMh battery in the pager.
The battery LED blinks in orange	<ul style="list-style-type: none">▪ The battery level is low. Place the pager onto the Visit Pager Charger (BE1260)  Important! If you have a pager charger; only use a rechargeable 1.2 V AAA NiMh battery in the pager.
The pager does not respond when a transmitter is activated	<ul style="list-style-type: none">▪ Check the batteries in the transmitters.▪ Move the pager closer to the transmitter to make sure it's within radio range.▪ Check that the pager is set to the same radio key as the other units in the Visit system, see Changing the radio key.
The pager is activated for no apparent reason	<ul style="list-style-type: none">▪ There is probably another Visit system installed nearby that triggers your system. Change the radio key on all units, see Changing the radio key.